



## INSTALLATION INSTRUCTIONS

### Tools Needed

- Screwdriver • Drill & Bits • 2 Molly Bolts, Toggle Bolts, or Large Wood Screws (depending on wall) •
- Level • Plumbers Basin Wrench to secure Faucet (Optional) • Wrench • Pencil •

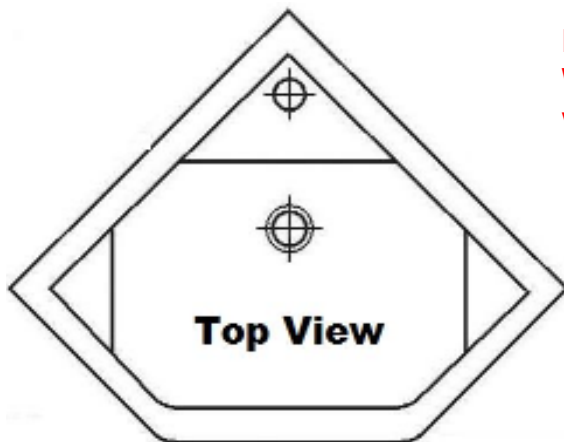

**Be sure to re-inforce wall before installation.  
We recommend a 2"x12" securely fastened to  
wall studs at desired height for installation.**

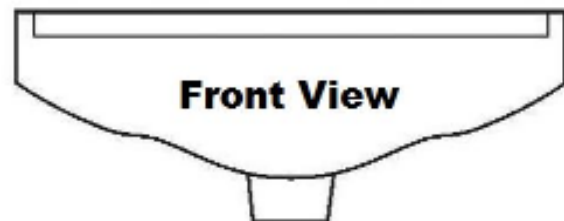

1. Determine the height you want. Place sink in the corner. Use a level to make sure both sides are level.
2. Position each metal mounting bracket against the underside rear of bowl and against the wall. Mark the location of mounting bracket holes on the wall.
3. Remove the bowl from the wall.
4. Start to drill hole **through 2"x12" re-inforced wall** for molly bolts or toggle bolts. If drill bit hits a stud, mount bracket and bolts using large wood screws.
5. If molly bolts are used, install and expand the bolt holder and then mount brackets.
6. If toggle bolts are used, make holes large enough to accept collapsible wing nut bolts and then mount bracket.
7. Before replacing bowl, it would be convenient at this point to mount the faucet according to the manufacturer's instructions.
8. Hang bowl on wall brackets and ensure that it is level.
9. Connect all supply tubes to the faucet. Connect trap and drain assembly as described by the manufacturer.

### NOTE:

**DO NOT tighten too much or you may damage bowl.**