


## INSTALLATION INSTRUCTIONS

### Tools Needed

- Screwdriver • Drill & Bits • 2 Molly Bolts, Toggle Bolts, or Large Wood Screws (depending on wall) •
- Wrench • Pencil • Level • Plumbers Basin Wrench to Secure Faucet (Optional) •

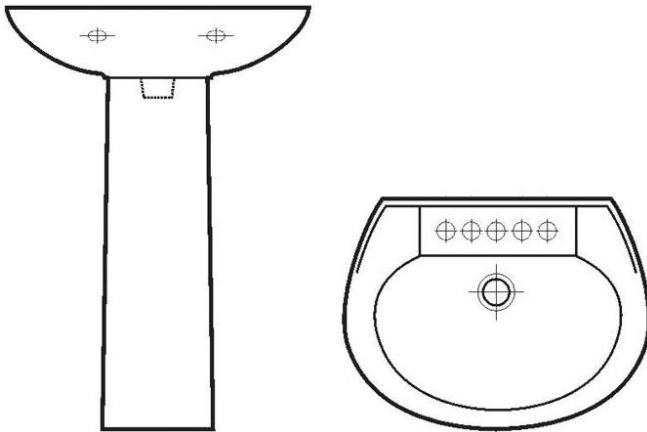

**Be sure to re-inforce wall before installation. We recommend a 2"x12" securely fastened to wall studs at the required height for your installation.**

1. Place lavatory bowl on pedestal so that back of bowl is flat against the wall.
2. Adjust the bowl so it fits as snugly as possible to the pedestal and is straight when checked with a level placed at the back of the bowl.
3. Position each metal mounting bracket against the underside rear of bowl and against the wall. Mark the location of mounting bracket holes on the wall.
4. Remove bowl from the pedestal being careful not to move pedestal. If the pedestal is moved, mark its position on the floor.
5. Start to drill hole **through 2"x12" re-inforced wall** for molly bolts or toggle bolts. If drill bit hits a stud, mount bracket and bolts using large wood screws.
6. If molly bolts are used, install and expand the bolt holder, then mount brackets.
7. If toggle bolts are used, make holes large enough to accept collapsible wing nut bolt, then mount bracket.
8. Before replacing bowl, it would be convenient at this point to mount the faucet according to the manufacturer's instructions.
9. Hang bowl on wall brackets and position in such a way so it is level and snug against the pedestal.
10. Connect all supply tubes to the faucet. Connect trap and drain assembly as described by the manufacturer.
11. If there is a gap between the bowl and pedestal, apply a bead of white latex caulking at the junction of the two pieces.

### NOTE:

**DO NOT tighten too much or you may damage bowl.**